

# Updating the **FLYMASTER F1** firmware

1. Switch the F1 module off.
2. Make sure you have a new pair of batteries in the F1.
3. Connect F1 to your PC using the serial cable.
4. Launch the “FlashF1”, and select the respective serial port and firmware file previously downloaded from the Flymaster web site.
5. Click the “Send” button on FlashF1.
6. Briefly push the “button B” on the F1 module. The flash process should start. During flashing the GPS LED and Bluetooth LED will flash quickly.
7. Wait until the progress bars complete and FlashF1 reports done.

